

## 33—440 Replacement of supporting joint for steering knuckle bearing

---

### Special Tool

---

Installer



116 589 04 62 00


---

### Removal

---

- 1 Remove steering knuckle (33—400), unscrew cover plate.
- 2 Knock supporting joint out of steering knuckle by means of a suitable mandrel while **clamping** steering knuckle into **vise provided with aluminum jaws**.


**Note:** Supporting joint will be destroyed when knocked out.

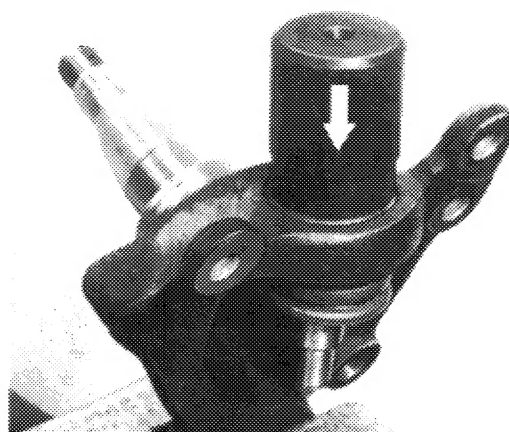

### Installation

---

- 3 Check steering knuckle (33—410).
- 4 Press supporting joint into steering knuckle with installer.

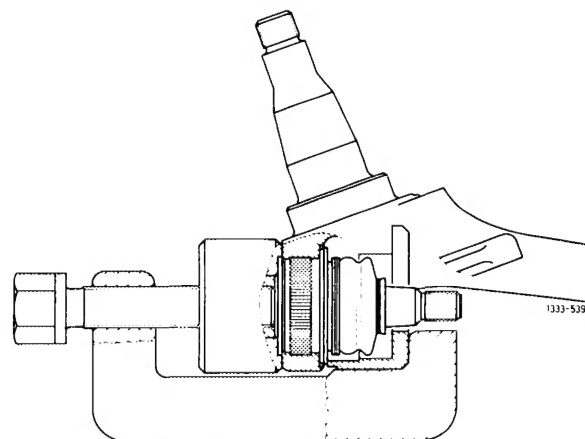

- 5 Check supporting joint (7) in steering knuckle (5) for correct seat.

